


Evo7EH with wheel board fitted.

Evo7EH packed with wheel board, but without wheels fitted. Each wheel requires 4 x M8 x 20mm hex bolts (17mm) (supplied). We suggest using a contact adhesive on the bolt thread to secure bolts.

The two over centre latches clamp onto the Evo7EH cabinet in their side recesses. To fit wheels board, sit the cabinet on its bottom face as above, hook onto the cabinet on the fixed clamp side first, then, with the over centr latches open, swing the board onto the front face and close the latches. Should the latches become loose, tighten the M10 (13mm) nut.

ITEM	DESCRIPTION	QUANTITY
1	WB6/7 EVOLUTION 6 & 7 EH WHEEL BOARD	1
2	4" CASTOR WHEEL	4
3	M8 X 20mm HEX BOLT	16
4	OVER CENTR LATCH	2

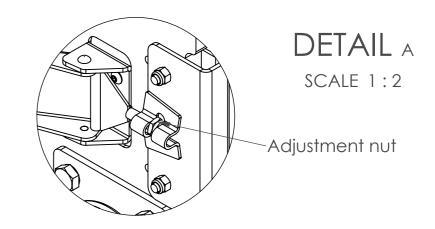

Funktion-One Research LTD				
Hoyle, Beare Green, Dorking, Surrey, RH5 4PS, UK				
mail@funktion-one.com +44 (0)1306 712820				

Sheet:Wheel Board	A3 Sheet Scale: 1:10	Drawn By: Mike Igglesden
Funktion-One Product Detail Drawing	Filename:	Evo7EH-F1-D

Evo7EH-F1-DD=T0086-00

10/10/2022